



VX Dimmer User's Manual

Manual part number 21-2119E

Software Version 1.1
10 March 1994

Leprecon / CAE, Inc.
P O Box 430
Hamburg, MI 48139 USA

810 231 9373 FAX 810 231 1631
WWW.leprecon.com

Table of Contents

1. General Description	3
1.1. Standard Features:.....	3
2. Installing Options	4
2.1. Rack Mount Kit	4
2.2. Stand Alone Kit	4
2.2.1. Power Input	5
3. VX 2400 Power Requirements	5
3.1. VX 2400 Power	5
3.2.. VX 1200 Power	5
3.3. VX 3000 Power	5
3.4. Over voltage and Protection and Power Indicator.....	6
3.5. Temp LED and Fan Control	6
3.6. Connection to Terminal Power Inlet	6
4. Control Input	7
4.1. DMX 512.....	7
4.1.1. DMX Load	7
4.1.2. DMX Indicators and controls	7
4.2. Analog control input.....	8
5. Dimmer Circuit Controls and Indicators.....	8
5.1. Circuit Breaker.....	8
5.2. Test Switch	9
5.3. Output LED.....	9
5.4. Error LED.....	9
6. Scene Storage	9
6.1. Recording Scenes	9
6.2. Scene Playback	10
7. Service and Maintenance	10
7.1. Recommended Service	11
7.2. Replacing modules	11
8. Appendix A DMX 512 Standards	12

1. General Description

The Leprecon VX Dimmer is designed to meet the demanding requirements of the lighting industry. Emphasis was placed on designing a system that is flexible, reliable, and serviceable. The latest digital technology, combined with a modular design, bring a new level of performance and ease of use to portable and permanent dimming systems.

Because of the many custom features available on VX systems, the features described in this manual may not cover all available options of the dimmer.

1.1. Standard Features:

- **Modular Dimming & Control Electronics**

Dimmer and control electronics can be serviced from the front panel, without removing the dimmer from the rack or enclosure.

- **DMX Control Input**

Digital control electronics using a patented circuit allows simultaneous DMX-512 and analog control input, with a highest-takes-precedence logic. Parallel input and output for DMX 512 allows daisy-chaining racks together in one system. DMX start address switches allow the dimmers to be assigned to start receiving data at any of the 512 addresses.

"True digital" control electronics provides accurate dimmer output tracking from channel to channel, eliminating any variance in output levels when multiple dimmer channels are patched together.

- **Analog Control Input**

Two 8 pin Jones type male plugs are provided for 0-10 DC analog control. Control cable and pin connections are compatible with other Leprecon dimmers.

- **Channel Breakers**

The circuit breakers used in the VX dimmers are fast response magnetic breakers. The quality of the breaker contributes to the reliable operation of the dimmer pack, even when shorted lamps or cables are plugged into the dimmer.

The front panel toggle also allows the breaker to be used as a switch for the dimmer channel.

- **Fan Cooling**

Two fans are used in the VX dimmer to keep the electronics at a safe operating temperature. The fans are controlled by a thermostat to keep fan noise to a minimum. When the pack is lightly loaded, the fans turn at a slower rate, and are accelerated to full speed when the temperature inside the pack increases.

- **Ten Scene Memory**

Non-volatile memory in the VX control card retains 10 scenes for backup or use without controller. Scenes program via front panel controls, and may be set individually at any time.

2. Installing Options

The VX dimmer can be shipped with user installed hardware for the intended application. If your order included either Rack mount or Stand-alone kits, the hardware is included in the package for the VX dimmer.

2.1. Rack Mount Kit

The Rack mount kit, CAE # 90-04-0012, for the VX dimmer includes the following items;

1) Rack mount ears	2 pcs.	20-2710
2) Rear support bracket	2 pcs.	20-2725
3) Screw, 6-32 x 1/2"	4 pcs	16-2112
4) Screw, 8-32 x 3/8"	6 pcs	16-3105

To install rack ears, simply screw the brackets to the left and right side of the dimmer. Use the larger #8 screws provided, and tighten securely.

The Rear support brackets attach to the back of the dimmer, using the screws that fasten the backpanel to the sides. Locate and remove these #6 screws, two on each side. Discard the original screws, and attach the rear support bracket with the new longer screws supplied.

Warning: Do not use screws longer than those provided for attaching hardware. Longer screws may contact live parts inside the dimmer and present a shock hazard.

2.2. Stand Alone Kit

For applications when the VX dimmer is not rack mounted, accessory handles and feet may be installed. The VX Standalone Kit, CAE # 90-04-0011, contains these parts:

1) Handles	2 pcs.	18-1034
2) Screw, #8-32 x 3/8"	6 pcs	16-3012
3) Lockwasher, #8 split ring	10 pcs.	16-3802
3) Rubber Foot	4 pcs.	18-3012
4) Screw, #8-32 x 1/2"	4 pcs.	16-3014

To attach the handles, locate the three holes in each side provided for the handles. Use the six shorter #8 screws with the lockwashers to attach the handles. Tighten the screws securely.

The rubber feet attach to the bottom side of the dimmer with the longer #8 screws. Tighten the screws securely.

Warning: Do not use screws longer than those provided for attaching hardware. Longer screws may contact live parts inside the dimmer and present a shock hazard.

2.2.1. Power Input

The VX dimmer is designed as a component for use in large, high-power stage lighting systems. It is the responsibility of the user to understand and properly follow guidelines and regulations for the use of equipment of this type. It is beyond the scope of this manual to fully explain all requirements and implications of connecting and operating dimming systems in general and Leprecon VX systems specifically.

If you have any doubts of your ability to specify, safely connect and use high-voltage, high-powered equipment, please employ a qualified electrician.

3. VX Power Requirements

3.1. VX 2400 Power

The VX 2400 with the standard Terminal Power inlet requires 80 amps per leg of 3 phase power. Because of the neutral currents that can occur with phase control dimmers, the neutral must be capable of carrying 150% of the current of a single leg, or 120 amps. Two screw terminals are provided for double neutral wires to meet this requirement. It is recommended that the safety ground be equal to the capacity of the hot legs, or 80 amps.

The Leprecon VX dimmer systems are primarily designed for three phase, four wire with ground power systems. Because of the variation in service from location to location, and the possibility of improper connection, it is strongly suggested that the service is checked for proper voltage with a meter before the dimmers are connected.

The VX 2400 consists of twelve circuits of twenty amps each. Nominal line voltage is 115 VAC at 60 Hz. Special order models are available for 50 Hz and 230 volt operation.

3.2. VX 1200 Power

The VX 1200 with the standard Terminal Power inlet requires 40 amps per leg of 3 phase power. Because of the neutral currents that can occur with phase control dimmers, the neutral must be capable of carrying 150% of the current of a single leg, or 60 amps. It is recommended that the safety ground be equal to the capacity of the hot legs, or 40 amps.

The VX 1200 consists of twelve circuits of ten amps each. Nominal line voltage is 115 VAC at 60 Hz. Special order models are available for 50 Hz and 230 volt operation.

3.3. VX 3000 Power

The VX 3000 with the standard Terminal Power inlet requires 108 amps per leg of 3 phase power. Because of the neutral currents that can occur with phase control dimmers, the neutral must be capable of carrying 150% of the current of a single leg, or 162 amps. Two screw terminals are provided for double neutral wires to meet this requirement. It is recommended that the safety ground be equal to the capacity of the hot legs, or 108 amps.

The VX 3000 consists of twelve circuits of twenty seven amps each. Nominal line voltage is 115 VAC at 60 Hz. Special order models are available for 50 Hz and 230 volt operation.

3.4. Over voltage Protection and Power Indicator

The VX dimmer system uses a modular control card for each 12 channel dimmer. This control card incorporates over voltage detection and shutdown to protect the dimmer electronics and lamp loads from destruction.

The VX control card features three green LED's for power indication. These indicators show that each phase is connected and within normal limits. If all three LED's are not lighted, power is not applied, is out of range, or a fault is present in the VX system.

The internal protection takes effect at 140 volts AC. Voltages of this level or above will light the red Over voltage LED on the power supply drawer front panel, and disable all dimmer control. Input from a controller or from the channel Test switches will be ignored, and no voltage will be output from any dimmer channels. As soon as the applied voltage is reduced to a safe level, the Over voltage LED will be quenched, and the dimmer will begin to operate normally.

3.5. Temp LED and Fan Control

Each channel of the VX rack system has its own temperature sensor. If a problem occurs that causes a channel to overheat, the entire dimmer shuts down until a normal temperature is reached. This overtemp shutdown is indicated by lighting the red Temp LED.

VX racks are cooled by temperature controlled fans mounted in each 12 channel section. The same temperature sensor that is used for thermal shutoff also determines the fan speed. This arrangement allows for the lowest possible noise level from the cooling fans while still providing proper cooling for the hottest module. Noticeable airflow and fan noise will only occur when the dimmer is loaded and channels are turned on long enough for the internal temperature to start to rise.

3.6. Connection to Terminal Power Inlet

The most common power input connector for the Leprecon VX 2400 dimmer is the Terminal Power inlet. This option provides an insulated terminal strip with 7 screw connections for 3 phase power. The block is labeled to identify the three power phases (X Y Z), neutral connections and a safety ground. Because of the large neutral current that can exist in phase control systems, two screw terminals are supplied for neutral connection.

It remains the responsibility of the user to determine the correct cable type to properly connect VX dimmer racks, and the need for overcurrent protection in the power supplied to the dimmer system.

For more information, see the appendix of this manual.

4. Control Input

4.1. DMX 512

One of the best features of modern lighting equipment is the use of digital communication between control boards and dimmers. The low cost of the cable and connectors in a digital system makes a substantial difference in system cost. With the adoption of DMX 512 by the industry, compatibility is assured between products offered by different manufacturers.

All Leprecon VX dimmers are compatible with DMX 512. To connect the VX dimmer to a DMX controller, simply use a standard DMX cable and plug the two devices together. A parallel wired female connector is supplied to allow output to additional dimmers or other devices.

4.1.1. DMX Load

VX dimmers, along with other digital dimmers manufactured by Leprecon, includes optical isolation at the DMX input. This design greatly reduces the chances of failure in the dimmer causing incidental damage to the control console, or other dimmers in the system. The load presented to the DMX line is greater than non-isolated dimmers. The DMX standard allows for up to 32 receivers per DMX line. The optical input stage of the VX dimmer limits the DMX line to ten dimmer packs. If additional packs are to be driven from a single DMX line, buffers manufactured by Leprecon or other suppliers can be used to amplify and distribute the DMX signal.

For more detailed information about DMX 512, see the appendix at the end of this manual.

4.1.2. DMX Indicators and controls

The VX Control card located at the top of the pack contains all electronics needed to decode the digital DMX signal, and translate that information into signals to control 12 dimmer channels. On the front panel are the indicators and controls for DMX inputs.

The green LED labeled "signal" is lighted whenever a DMX signal is being received. This indicates that the controller, cable and DMX input to the VX dimmer system are functional.

The three thumbwheel switches labeled "Start Address" are used to select the board channels that the VX dimmer will respond to. For instance, a switch setting of 001 will assign VX dimmer channel 1 to the board control channel 1. Setting the switches to 13 will cause the first VX dimmer channel to follow board control channel 13. This would be the case when a second 12 channel VX is used as part of a larger system.

The control electronics is programmed to ignore changes to the address thumbwheels until the switches have stopped changing. For this reason, it will require a moment for the VX dimmer to accept a new address after the switches have been changed. This feature is useful when scenes are stored in the dimmer using a DMX source. For information about storing scenes, see section 5.

The LED labeled "Match" will flash each time a DMX channel equal to the switch setting is received. For example, if the Start Address switches on the Control drawer are set to 500, and the console is only outputting 256 DMX channels, the Match LED will not flash, and no dimmer channels can be turned on.

4.2. Analog control input

The VX control electronics also accepts analog control signals. The DC level needed for full output is factory set at 10 volts, but can be readjusted in the range of 5 to 24 volts DC.

The analog control connectors are 8 pin male Jones type. The pin connections are shown below:

Connector	Pin	Function
1	1	Channel 1
1	2	Channel 2
1	3	Channel 3
1	4	Channel 4
1	5	Channel 5
1	6	Channel 6
1	7	Not Used
1	8	Control Common
2	1	Channel 7
2	2	Channel 8
2	3	Channel 9
2	4	Channel 10
2	5	Channel 11
2	6	Channel 12
2	7	Not Used
2	8	Control Common

5. Dimmer Circuit Controls and Indicators

Each dimmer chassis contains twelve independent dimmer circuits, each with the following controls:

5.1. Circuit Breaker

The channel breaker is the first line of defense against shorted lamps or load circuits. A special type of magnetic breaker has been chosen for the VX system. This breaker allows only a fraction of the energy to pass through the system in the case of a short in the load or load wiring as compared to conventional magnetic breakers. The performance of this breaker contributes to the reliability of the VX system.

In the VX 2400, current in excess of 20 amps in any single output will cause the channel breaker to trip. In the VX 1200 the maximum is 10 amps, and the VX 3000 is 27 amps. The breaker toggle will flip to the left, indicated on the front of the breaker as "OFF". If a breaker trips, it is an indication of a problem on that load circuit. Reset the breaker only after finding and fixing the fault that created the overload. Resetting the breaker repeatedly with a shorted output stresses the breaker, the dimmer channel and load wiring.

Channel breakers can also be used to turn off a single circuit. Pushing the breaker toggle handle to the "OFF" position will disconnect power to the dimmer circuit and load.

5.2. Test Switch

The proper connection and operation of the dimmer circuits can be tested without a control console by using the Test switch. Pushing in the Test switch will turn on the dimmer channel to allow lamps and load patching to be verified. Push the "Test" switch again to return it to the out position, and turn the channel off again.

The "Test" switch is a hard wired function at the output stage of the dimmer. For this reason, the "Test" switches will continue to operate even if the control electronics are disabled. This fail-safe feature can be very important if the control console or dimmer electronics are disabled.

5.3. Output LED

This green LED is connected to the output of the dimmer circuit. When lighted, it indicates that voltage is present at the load. Any condition that turns on the load will light the LED; Test switch on, control signal present, or dimmer malfunction. In conjunction with the other indicator, the Output LED can be used to troubleshoot system problems quickly.

5.4. Error LED

Each channel of the VX dimmer includes an "Error" LED that when lighted indicates one of several improper conditions. These conditions are easy to understand, the dimmer has no output when it should, or the dimmer has output when it should not. The causes are listed below:

- a) Breaker open - no power applied to the channel.
- b) No Load - lamp disconnected or burned out.
- c) Test - Channel is at 100% because the "Test" switch is on.
- d) Shorted SCR - Bad power device.

Note: No-load indication is accurate only with the control signal below 90% and the "Test" switch in the "Off" position.

6. Scene Storage

With microprocessor based control circuitry, the VX dimmer is capable of advanced functions, such as scene storage. Using the front panel thumbwheel and push switches, up to ten scenes sent to the dimmer can be saved in non-volatile memory for later playback. Any DMX or analog controller can be used to set scenes in the VX dimmer.

6.1. Recording Scenes

Scenes are programmed into the VX dimmer by sending a scene to the dimmer, specifying the scene number to be stored, and pressing the "Enter" switch. DMX addresses starting with 600 are used to program scenes.

- 1) Set the levels of the dimmer channels with any analog or DMX controller.
- 2) Select the scene to store with the DMX switches. Set the first DMX digit to "6" to indicate scene storage. Set the next two digit to a number between 1 and 10.
For example, setting an address of "605" would prepare the dimmer to store scene 5.

3) Press the "Enter" button to memorize the scene. Return the DMX switches to the previous start code to resume normal operation.

4) To clear all ten recorded scenes, set the thumbwheels to address 699. Press "Enter" to erase all scene memory.

6.2. Scene Playback

The scenes stored in the VX dimmer can be recalled for emergency backup, or for use without a control board. The scenes are recalled with the DMX switches set to addresses beginning with 700:

1) Set the first DMX digit to "7"

2) Set the second two digits to a number between 1 and 10.

3) Press the "enter" button to start a one second fade to the memorized scene. If a scene is already being output from memory, pressing the "Enter" button will start a one second crossfade from scene to scene. Memorized scenes will pile-on with current DMX or analog scenes from controller.

4) To resume normal operation, set the DMX switches to a valid address 0-512.

5) Scene 700 is a pre-recorded blackout, and can be used to fade out any of the recorded scenes.

7. Service and Maintenance

The VX dimmer racks are designed to make troubleshooting and repair of the system fast and easy. LED indicators are used to pinpoint problems to a defective module. The suspected module can be removed without tools, and the system repaired in minutes by installing replacement parts.

7.1. Recommended Service

VX dimmers, like other dense-pack dimmers, needs an unrestricted supply of fresh, cool air. The pack has been designed to operate at ambient temperatures up to 40 degrees Celsius, or about 100 degrees Fahrenheit. When the dimmers are used in very dusty conditions, it may be necessary to remove and clean the air inlet filters periodically.

7.2. Replacing modules

VX dimmers are exceptionally easy to service. If a problem is suspected in a power module, the part can be replaced in a few minutes. To change a power module, follow these steps:

Warning: Removing the dimmer front panel will expose dangerous high voltage components. Do not attempt to service dimmer with power applied.

- 1) Disconnect power to the dimmer pack. Potentially lethal voltages are present inside the dimmer.
- 2) Remove the front panel. This is done by turning the four quarter-turn fasteners to the left (counterclockwise). Pull the front panel straight out.
- 3) Disconnect the six pin control connector from the suspect module.
- 4) Pull the module straight out. It will require a tug to unseat the power connector located at the back of the module.
- 5) Position the replacement module on the plastic guide.
- 6) Connect the six pin control connector.
- 7) Gently slide the module into place. It may be necessary to wiggle the module into alignment with the power connector. The click of the contacts mating means that the connector is completely seated.
- 8) Replace front panel. Gently push in the quarter turn fasteners while turning until they drop into place. Push the fasteners completely in against the spring, and turn to the right (clockwise) to lock.

8. Appendix A DMX 512 Standards

The following information is a summary of the USITT 1990 standard for dimmers and controllers. A complete copy may be obtained from:

USITT
10 W. 19th ST.
Suite 5A
New York, NY 10011-4206

The DMX 512 standard is designed as a simple, reliable system for connecting digital dimmers and controllers. The protocol allows up to 512 dimmers to be connected to a single control console. With 512 dimmers in a system, DMX 512 allows each dimmer level to be updated as fast as 44 times each second.

As far as the users of DMX equipment are concerned, three things matter more than the electrical specifications contained in the DMX description. The most important items are connectors, cable and how to wire the two ends together.

DMX 512 currently uses 3 pins of a 5 pin connector. The two unused pins are reserved for future use, some manufacturers are using these pins for communications back from the dimmer to the control console, or as a redundant data line. At this time, DMX cables are being used that only contain 3 wires. If you wish to include the capability to use the extra pins, it is suggested that you buy or make cables with all 5 pins connected.

The connectors to be used for DMX 512 are as follows:

Console end (transmitter) Female 5 pin XLR
Dimmer end (receiver) Male 5 pin XLR

The 5 pin XLR is very similar to the 3 pin connectors used for microphone cable. Some manufacturers of XLR connectors are Switchcraft, ITT Cannon, and Neutrik.

Cable type:

Shielded twisted pair approved for EIA-422/EIA-485 use. Either one pair with shield or two pair with shield may be used. Examples of such cable are:

Single pair: Belden 9841, Alpha 5271
Two pairs: Belden 9842, Alpha 5272

The Pin Designations for DMX 512 are as follows:

Pin 1 Signal common (cable shield)
Pin 2 Data 1-
Pin 3 Data 1+
Pin 4 Spare, optional Data 2-
Pin 5 Spare, optional Data 2+