

DVD V7200 – Resetting to Factory Defaults

Overview

Multiple employees often must share a player. Settings that work for one situation may cause errors in another application. To avoid conflicts, it is best to return a Pioneer DVD-V7200 and DVD-V7400 to the factory default settings if the player has diverse uses. This bulletin provides the steps to reset the player to the factory configuration.

Explanation

The steps to reset a DVD-V7200 and DVD-V7400 to factory default configuration are listed below. The Remote Control Unit is inactive when the player is in Stand-By mode; all commands must be sent from the player's front faceplate.

1. Place the player in Stand-by mode
2. Hold down the left scan/skip button
3. Power ON the player
4. Release the left scan/skip button only after the player displays a blank screen

Note: Remove any discs from the player before beginning this process.



DVD-V7x00 Left Scan/Skip button